ORDER NO. MD0501002C8

Speaker System

SB-FS530EB

Colour

(S)... Silver Type

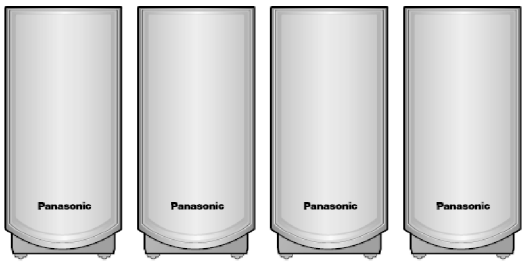

SB-FS530

SPECIFICATIONS

Specification

PDF created with pdfFactory Pro trial version www.pdffactory.com

Type	**1 way, 1 speaker system (Bass-ref.)**
Speaker unit(s)	**Impedance 6 Ω**
Full range	**6.5 cm Cone type**
Input power (IEC)	**55 W (Max)**
Output sound pressure	**80 dB/W (1.0 m)**
Frequency range	**88 Hz - 25 kHz (-16 dB)**
	100 Hz - 22 kHz (-10 dB)
Dimensions (W x H x D)	**90 mm x 193 mm x 102 mm**
Mass	**0.7 kg**

Notes :

1. **Specifications are subject to change without notice.**
2. **Mass and dimensions are approximate.**

■ **System : SC-HT530EB-S**	**Music Center : SA-HT530EB-S**
	Speaker System : SB-HT530EB-S
	Active Subwoofer : SB-WA530EB-S
■ **System : SC-HT530GCPS**	**Music Center : SA-HT530GCPS**
	Speaker System : SB-HT530EB-S
	Active Subwoofer : SB-WA530GC-S
■ **System : SC-HT530GN-S**	**Music Center : SA-HT530GN-S**
	Speaker System : SB-HT530EB-S
	Active Subwoofer : SB-WA530GN-S

SB-HT530EB-S consists of : SB-FS530EB-S (x 4) and / SB-PC730P-S1 (x 1)

© 2005 Matsushita Electric Industrial Co. Ltd.. All rights reserved.
Unauthorized copying and distribution is a violation of law.

PDF created with pdfFactory Pro trial version www.pdffactory.com

Panasonic

1. Disassembly Process

1.1. Disassembly of the Front Cabinet Assembly

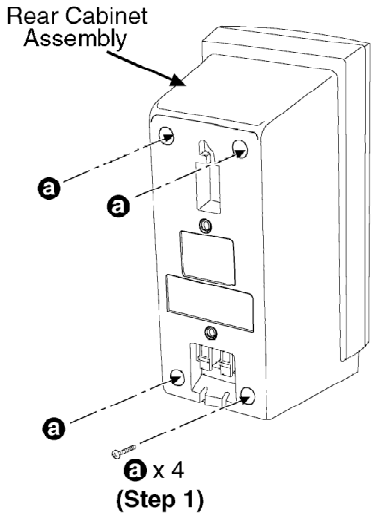

Step 1: Remove 4 screws from the Rear Cabinet Assembly.

PDF created with pdfFactory Pro trial version www.pdffactory.com

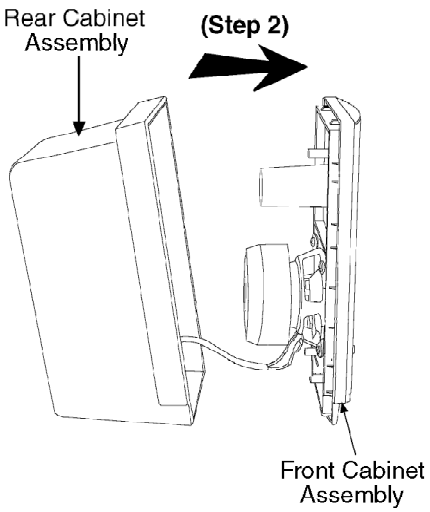

Step 2: Push the Front Cabinet Assembly forward to detach from the Rear Cabinet Assembly as arrow shown.

1.2. Disassembly of the Speaker Unit

Repeat step 1 to step 2 in item 1.1.

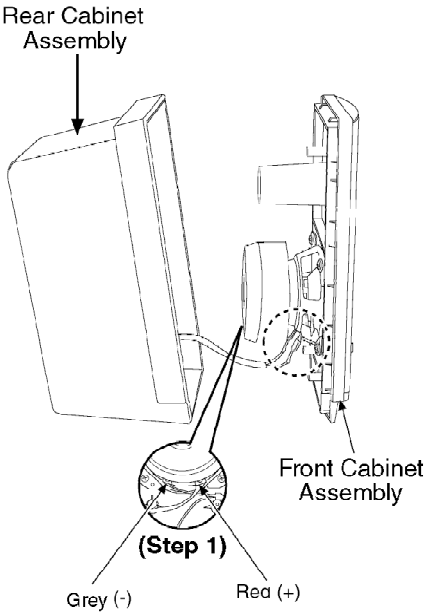

Step 1: Detach the wires (+) red and (-) grey from the Speaker.

PDF created with pdfFactory Pro trial version www.pdffactory.com

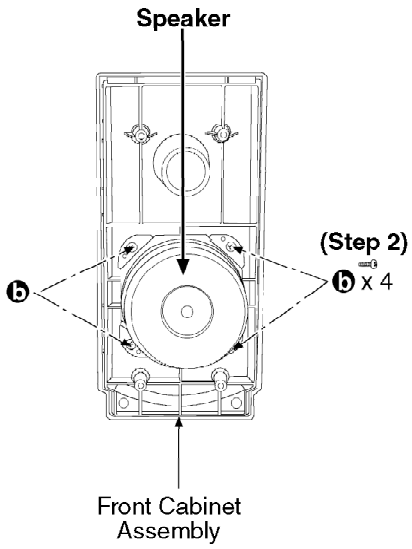

Step 2: Remove 4 screws from the Speaker.

1.3. Disassembly of the Terminal

Repeat step 1 to step 2 in item 1.1.

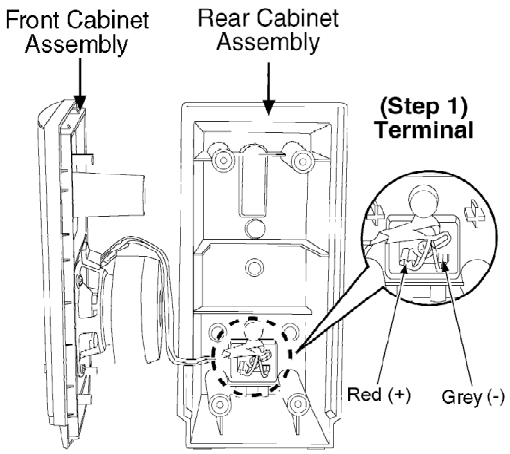

Step 1: Detach the wires (+) red and (-) grey from the Terminal.

PDF created with pdfFactory Pro trial version www.pdffactory.com

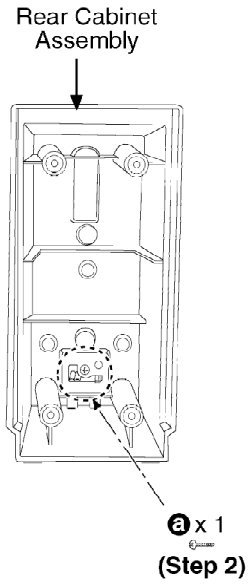

Step 2: Remove 1 screw from the Terminal.

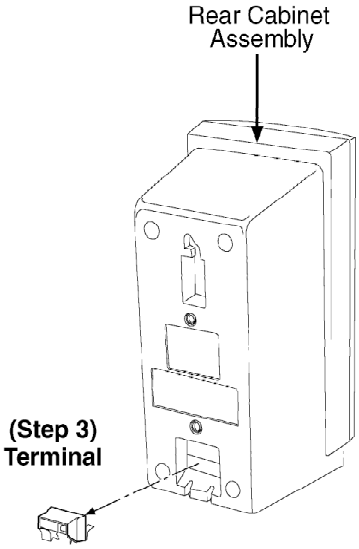

Step 3: Remove the Terminal from the Rear Cabinet Assembly.

2. Connection of the Speaker Cables

- Be sure to connect speaker cables before connecting the AC power supply cord.

- The load impedance of any speaker used with this unit must be 6 Ω .

- Be sure to connect the cable from the right speaker to the right terminal and the cable from the left speaker to the left terminal.

1. Strip off the outer covering, and twist the center conductor. Make

PDF created with pdfFactory Pro trial version www.pdffactory.com

sure the bare ends of the wires are not unravelled. (If they are, twist them tight again.)

2. Insert the wire to the rear panel of the unit and close the lever.

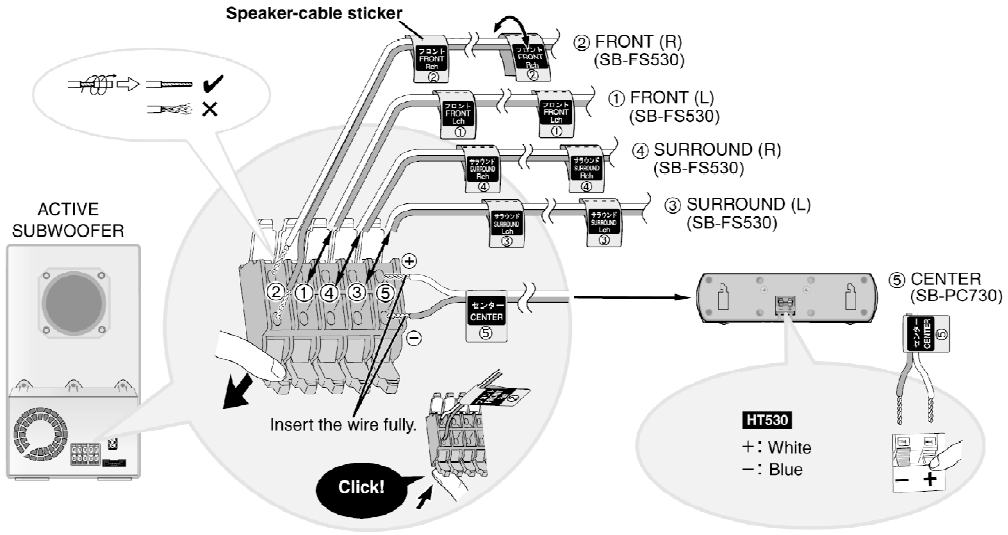

Notes :

- To prevent damage to circuitry, never short-circuit positive (+) and negative (-) speaker wires.

- Be sure to connect only positive (white) wires to positive (+) terminals and negative (blue) wires to negative (-) terminals. Incorrect connection can damage the speakers.

3. Connection of the Wiring Diagram

4. Cabinet Parts Location

PDF created with pdfFactory Pro trial version www.pdffactory.com

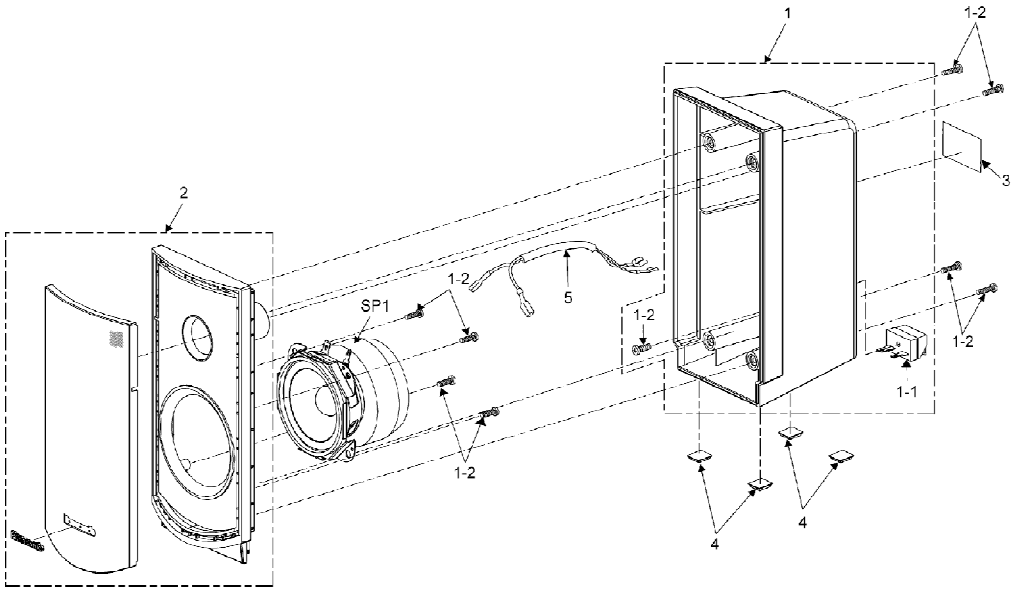

5. Replacement Parts List

Notes :

- Important safety notice :

When replacing any of these components, be sure to use only manufacturer's specified parts shown in the parts list.

- [M] indicates in the Remarks columns indicates parts supplied by PAVCSG.

Ref. No.	Part No.	Part Name & Description	Remarks
		CABINET AND CHASSIS	
1	RYBX0078-HJ	REAR CABINET ASS'Y	[M]
1-1	K4BC02B00017	TERMINAL	[M]
1-2	XTB3+10GFJ	SCREW	[M]
2	RYBX0077-SJ	FRONT CABINET ASS'Y	[M]
3	RGNX0278-K1	SPEC LABEL	[M]
4	RKA0072-KJ	LEG CUSHION	[M]
5	REEX0436	TRANSIT WIRE	[M]
		PACKING MATERIAL	
P2	RPFX0112-J	MIRAMAT BAG	[M]
		SPEAKER	
SP1	EAST65P08E6	SPEAKER	[M]

6. Packaging (SB-HT530EB-S)

Note: The diagram below shows the packaging for SB-HT530EB-S.

PDF created with pdfFactory Pro trial version www.pdffactory.com

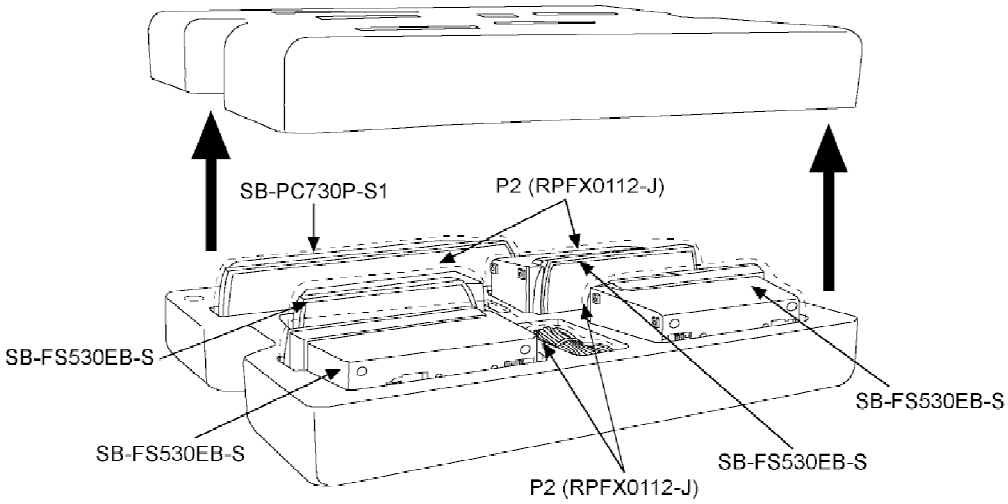

FLE0501W/S

PDF created with pdfFactory Pro trial version www.pdffactory.com